



Connections

Connecting your POE and Router

This section gives you step by step pictures and explanations of how to connect the equipment used to provide internet within your home or business. If you are unable to complete the task please refer to the corelating video at www.btwi.net or call support at 515-465-3043.

This picture shows the connections to your radio's power supply. The cable coming in from the radio outside will have a metal connector and be plugged into the POE port on the power supply. The LAN port will have a cable that runs to the back of your WIFI router as shown in the following pages. Last there will be a cord that plugs into your homes power receptacle to power the radio.



This picture shows how the cable from your power supply's LAN port plugs into the blue port on the back of the ASUS WIFI router.



This picture shows how the cable from your power supply's LAN port plugs into the blue port on the back of the TP-Link WIFI router.

